


# 8-5

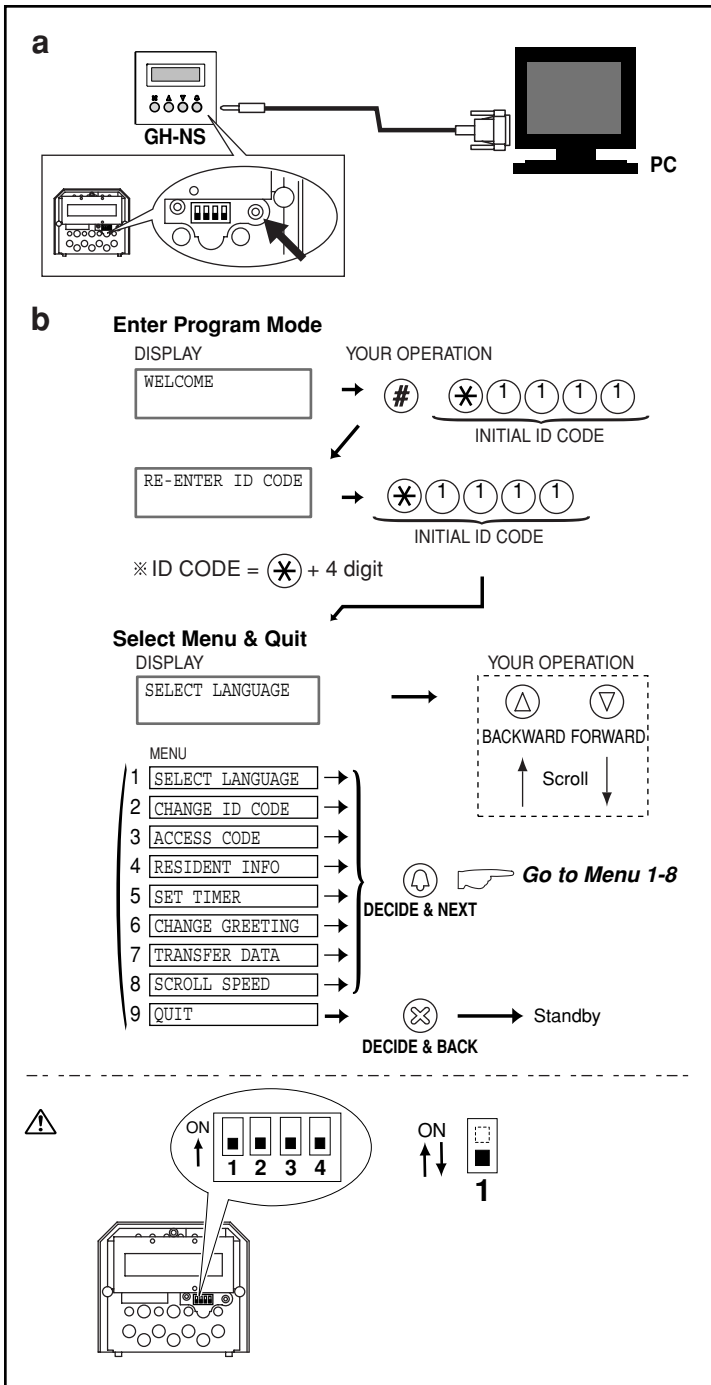



## Programming (GH-NS)

### a. Programming with a PC

- You can use a PC to enter data and write in or change resident names.
- Use the connection cable that comes with GH-NS to connect your PC to GH-NS.
- In your PC, install the setup tool program from the CD that comes with the GH-BC.
- \* For information on how to use the setup tool, see the text (.txt) file that is installed in the same folder as the setup tool (.exe).

### b. Programming with GH-NS and GH-10K

- Confirm that "Welcome" is shown on the Display, indicating that the system is in standby mode.
- \* You can change the "Welcome" text.
- First, set the system to program mode. (For details, see above.)
- \* Before you begin programming, we recommend that you register a new exclusive ID code for yourself so that the system is not accessed by others. (For details, see 8-6.)
- ⚠ If you have forgotten your ID code, set the switch (#1) to ON for approximately 2 seconds. The ID code will be reset to the default setting of "\*1111".

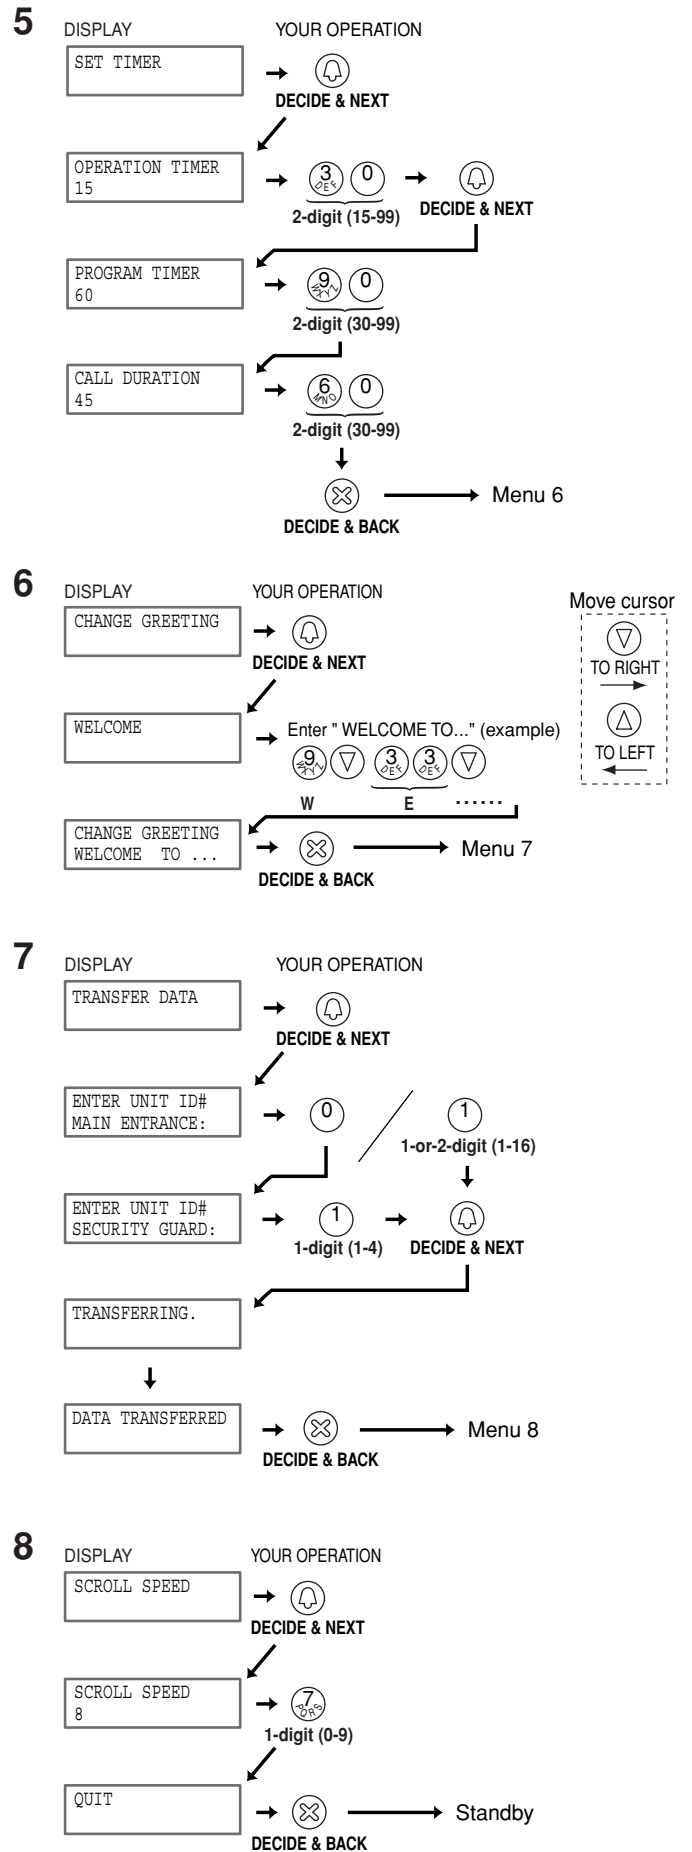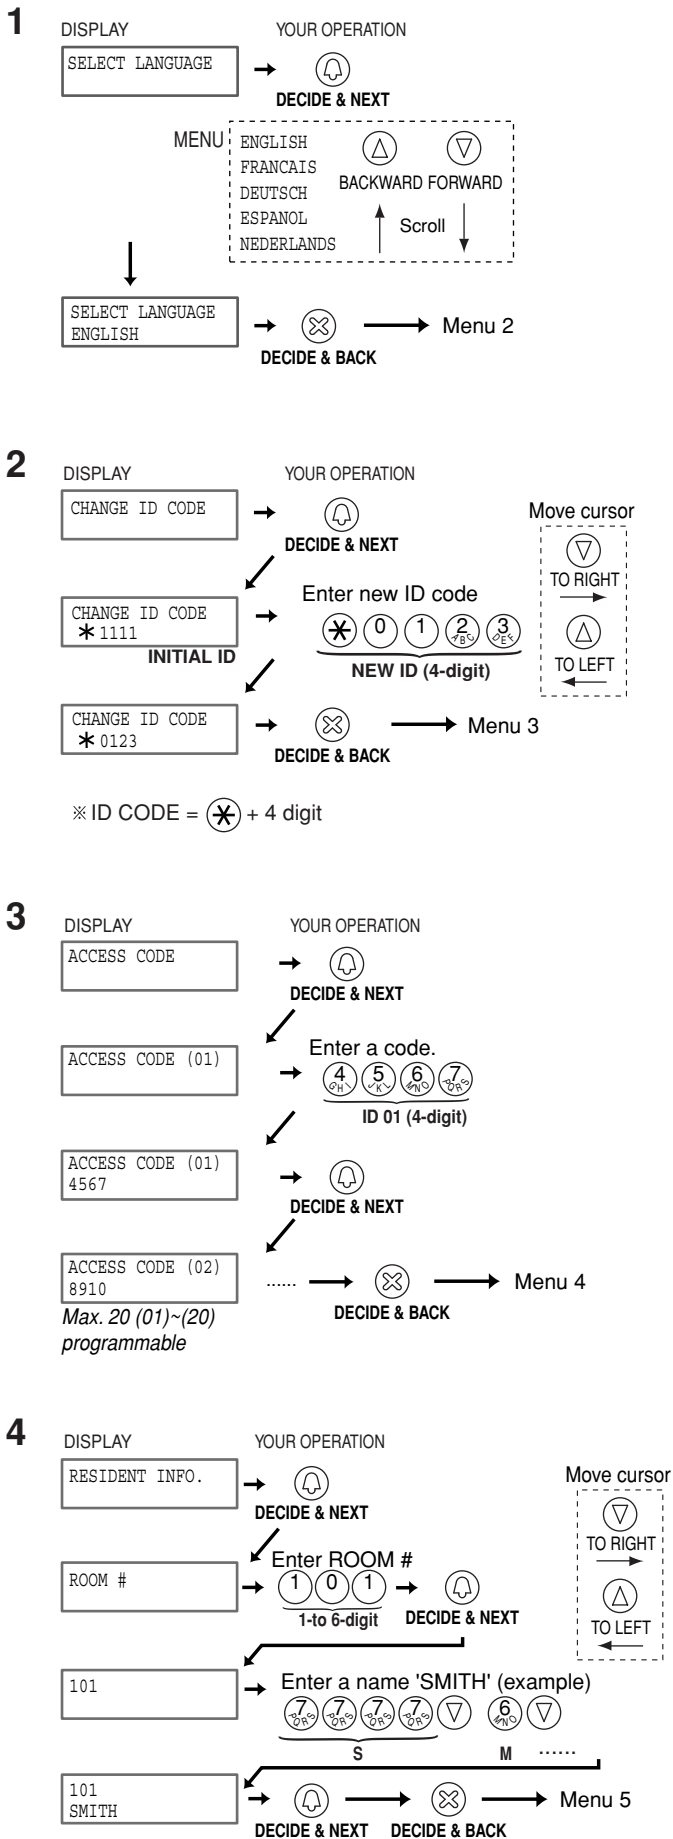

## 8-6

### Program Mode (GH-NS)

1. Menu 1: Select language  
Choose language to be displayed on GH-NS.
2. Menu 2: Change ID code  
Enter new ID code starting with "\*", then 4-digit number.  
(Example: \*1234)
3. Menu 3: Set access code  
Enter new 4-digit Access Code. (Example: 1234)
  - (0000) cannot be registered as an access code.
  - Recommend not to use a simple access code such as (1111).
4. Menu 4: Write in resident information  
Register room #s and resident names.  
Enter room #s using 1 to 6-digit characters.  
Enter resident name (up to 16 characters).
5. Menu 5: Set input timeout timer  
Operation Timer: If the operation panel is not operated for a certain period of time, the system returns to standby mode.  
Programmable from 15 to 99 seconds.  
Program Timer: If, in Residential Programming mode, the operation panel is not operated for a certain period of time, it automatically cancels the programming mode. Programmable from 30 to 99 seconds.  
Call Timer: Call from Entrance panel expires in a certain period of time. Programmable from 30 to 99 seconds.
6. Menu 6: Change greeting  
Enter greeting message (up to 160 characters).
7. Menu 7: Transfer link information
8. Menu 8: Set the greeting scroll speed  
0 = slow, 9 = fast